FIRST®LEGO® League TUT\$RIALS

teach

share

learn

ROBOT DESIGN LESSON

COLOR SENSOR POSITIONING AND SHIELDING

WHERE SHOULD THE COLOR SENSOR BE PLACED?

- According to EV3
 documentation, Color Sensors
 work best between 4-12mm (1/2
 - 1 1/2 studs) off the surface you
 are detecting
- Note: Readings from the Color Sensor may be affected by marks, dirt, folds, bumps, and other wear and tear on the surface the robot runs on. Consider different strategies to accommodate for these situations.



THE WHAT, WHY & HOW OF SHIELDING


- What? Shielding refers to surrounding your Color Sensors with beams to prevent ambient light from interfering with the color sensor's readings
- Why? Shielding may improve repeatability and consistency for your robot. Shielding may be valuable if you run your robot in drastically different light settings (very sunny room, very dark room)
- How? Surround the Color Sensor with beams to block external light



DO YOU REALLY NEED TO SHIELD YOUR EV3 SENSORS?


- We conducted a test of the EV3 Color Sensor to see if shielding mattered
- We connected one shielded sensor and one unshielded to the same brick
- We compared the reflected light and color readings and noticed not much of a difference
- We tried this experiment with a flashlight shining as well as sunlight streaming from a window.
- The shielding does seem to effect the reading slightly. This is probably not much of a variation and you could do without shielding and still be reliable in most situations. However, shielding your EV3 sensor will do no harm.
- We recommend that you conduct your own tests with the EV3 Color Sensor




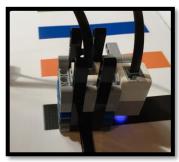

CREATING MODULES

- You could create shielding modules around one or both of your color sensors like in the images on this page
- You do not need to cover the entire sensor – only the bottom is important

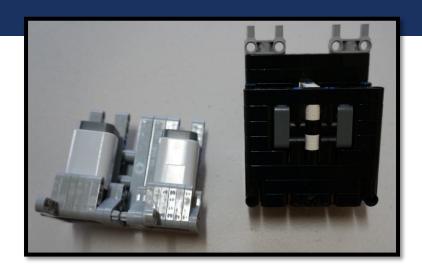


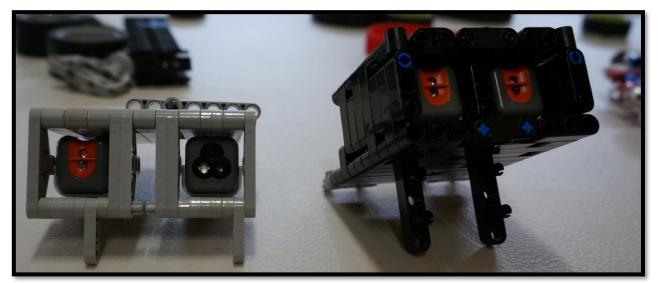


Note: These images are with the NXT Color and Light Sensors

ADDING SMOOTH PLATES


If the shielding is low to the ground, make sure that you are not scraping the ground.

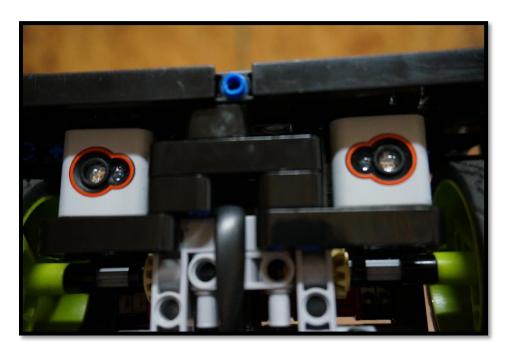


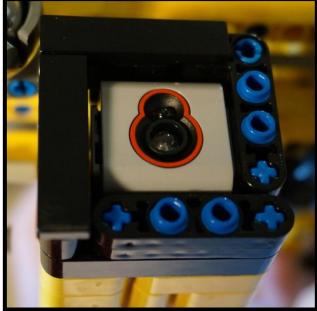


USING DIFFERENT PARTS

Experiment
 with
 different
 LEGO
 elements
 when you
 build your
 shield

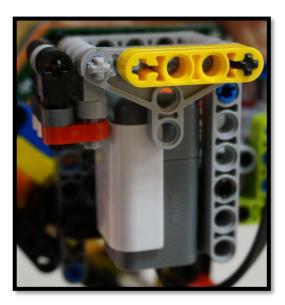

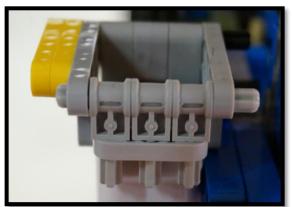

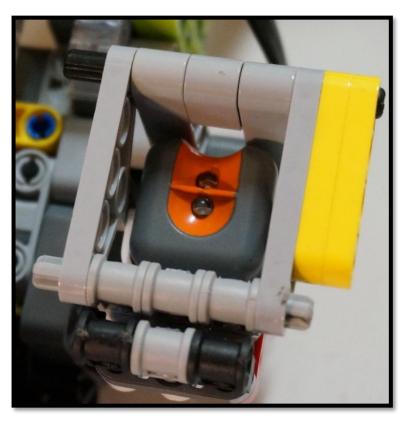

© 2018, FLL Tutorials, Last Edit 6/11/2018

CREDITS

- This tutorial was created by Sanjay Seshan and Arvind Seshan
- Images of shielded sensors provided by FTC Team 8393 The Giant Dienciphalic BrainSTEM Robotics Team
- More lessons at <u>www.ev3lessons.com</u> and <u>www.flltutorials.com</u>



This work is licensed under a <u>Creative Commons Attribution-</u> NonCommercial-ShareAlike 4.0 International License.